


4kc models Factory Menu

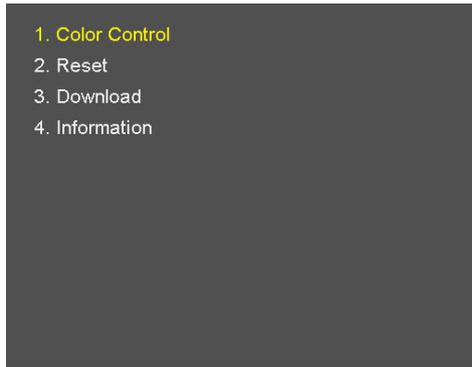

Factory mode menu entry

>Front key: "Menu" + "Down" for about 5 seconds. (Until the regular menu OSD disappears)

>Use a slight delay between pushing "Menu" and "Down" keys.

Color Control (Do not modify these settings)

> Adjust the values SUB Brightness/Contrast/Red/Green/Blue.

(0~255)



Reset (DO NOT RESET THESE)

- **Reset Factory Default**

- All setting values are initialized.

(Except Operating Time/Calibration Data)

- **Reset Operating Time**

- Operating Time reset.

- **Reset Calibration Data**

- Calibration Data reset.



4kc FW Download / Upgrade

-Use to upgrade the firmware using a **FAT-32** formatted USB memory stick.

-Do not turn off the monitor while a Download is in process.

- **FW Download**

>Insert the USB memory stick containing ONLY the file "Thetis733.bin" into the USB port.

>Select the "**FW** Download" menu to start the firmware upgrade

>Time required: about 10 **seconds**

- **FPGA Download**

>Insert the USB memory stick containing ONLY the file "Thetis.pof" into the USB port.

>Select the "**FPGA** Download" menu to start the FPGA upgrade

>Time required: About 8 to 10 **minutes**

- **OSD Download**

>Insert the USB memory stick containing ONLY the files "Boland_OSD.dat" & "Boland_Font.dat" into the USB port.

>Select the "**OSD** Download" menu to start the OSD upgrade

>Time required: About 5 to 6 **minutes**



Version



> Version / Release day / Release time / Panel on Time